



USE THE FORMULAS BELOW TO CALCULATE THE FOLLOWING DIMENSIONS FOR NON-STANDARD PACKAGES:  
(OFW = PACKAGE WIDTH)

DOW - DOOR OPENING WIDTH      HL - HEADER LENGTH      FBO - FULL BREAKOUT OPENING  
FSW - FS PANEL WIDTH              FXW - FX PANEL WIDTH  
FSH - FS PANEL HEIGHT              FXH - FX PANEL HEIGHT  
GRL - GUIDE RAIL LENGTH

WIDTH DATA

SINGLE UNITS

DUAL UNITS

DOW = OFW - 11.5625

DOW = OFW - 19.625

FBO = OFW - 8.125

FBO = OFW - 12.750

HL = OFW - 3.500

HL = OFW - 3.500

FSW =  $\frac{OFW}{2}$  - 2.875

FSW =  $\frac{OFW}{4}$  - 2.000

FXW =  $\frac{OFW}{2}$  - 2.9375

FXW =  $\frac{OFW}{4}$  - 2.0625

HEIGHT DATA (STANDARD OFH = 90")

FXH = FSH = OFH - 8.000

JAMB HEIGHT = OFH (UNITS W/O TRANSOM)

CLEAR OPENING HEIGHT = OFH - 7.000 (UNITS W/O THRESHOLD)

CLEAR OPENING HEIGHT = OFH - 7.500 (UNITS W/THRESHOLD)

GUIDE RAIL LENGTHS

GRL = FSW + 1.250 (ONE-WAY TRAFFIC FROM NON-FOLD SIDE)

GRL = FSW + 8.250 (TWO-WAY TRAFFIC OR ONE-WAY TRAFFIC FROM FOLD SIDE)

*NOTE: REFER TO ANSI/BHMA STANDARD A156.10 FOR ADDITIONAL DETAILS ON  
GUIDE RAILS AND ACTIVATION & SAFETY ZONE REQUIREMENTS*