


Screens shown below are for the slave operator in a paired assembly. See other side for master & single menus.

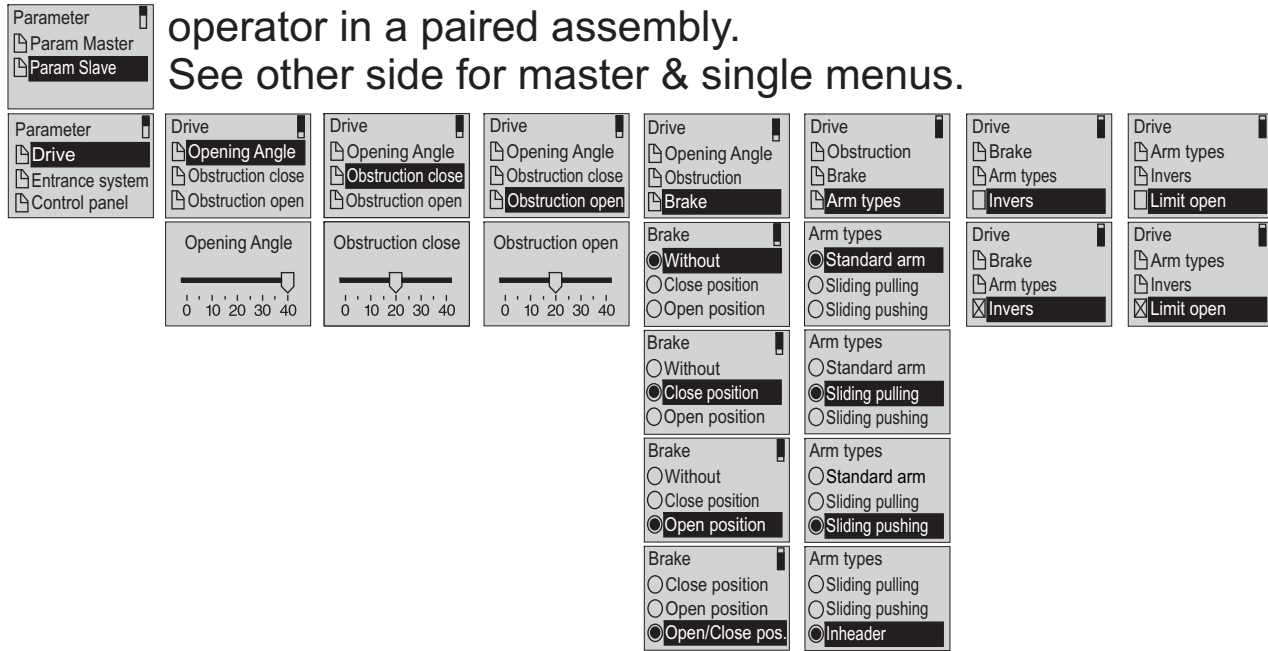

In the parameter adjust mode the following keys are active.



Initiates an "Open" command

Returns to previous screen


After selecting item / value confirms and stores entry

Scrolls up in menus or decreases value


Scrolls down in menus or increases value

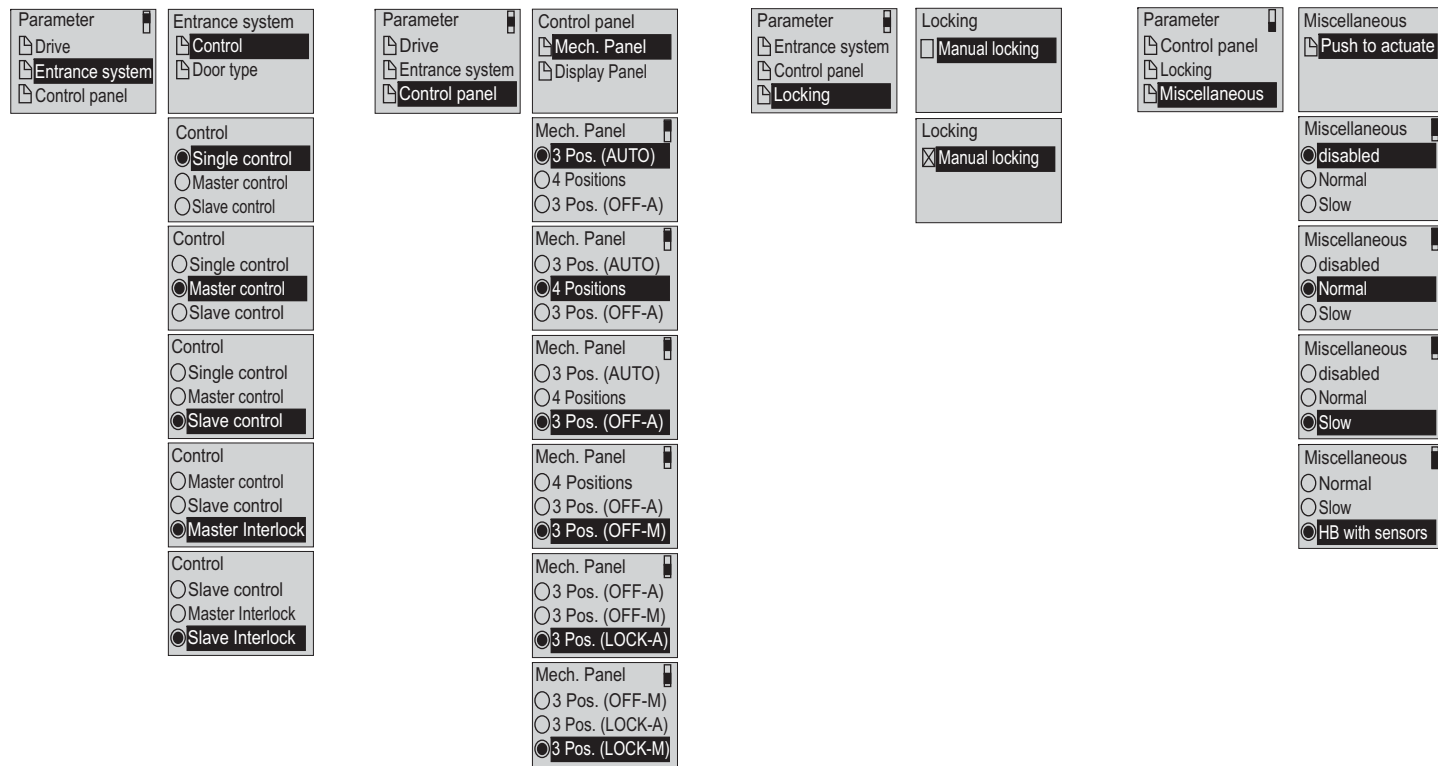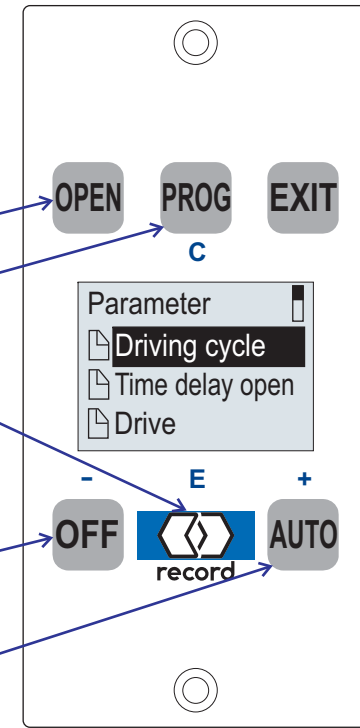


Screens shown at right are not for parameter adjustments, and are available for both master & slave units. See FPC902 instructions for additional explanation.

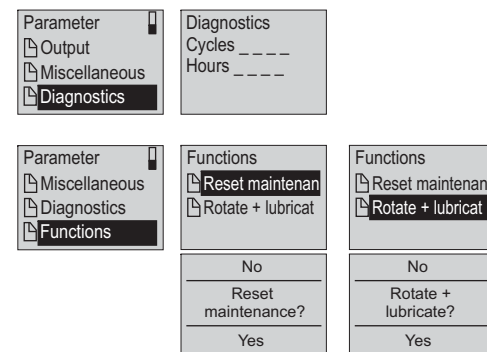

A small key displayed on the left side of the screen indicates a remote override switch has disabled the panel.

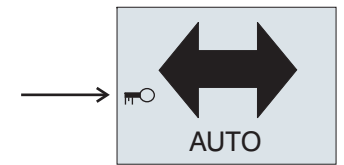

If the message "Control Panel can't override" is displayed when attempting to change operator modes, a second control panel is connected to the door and has priority.

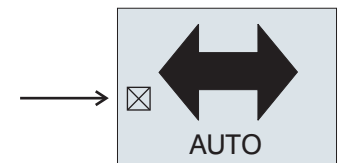

The control panel can be "locked", preventing unauthorized use, by pressing the key sequence **record + PROG + OFF**

A small square with an "X" will appear on the left of the display. To re-enable the keypad, repeat the above sequence.

To reset the door operator, press the **record** button for 8 seconds. The screen at right will appear. Press the **record** button again to initiate a software reset; normal operation should resume in 3 - 4 seconds. If not, contact your local record dealer.

