




record-USA Manual ICU Sliding Doors Owner's Manual

Trackless Unit > Operation

To achieve full opening, doors must be in the swing out 90° position. This is accomplished in the following manner.

Sliding Door must be moved to full open position past Anti-breakout tube and engaged to transfer pivot on floor for breakout to occur.


If equipped > Positive Latch mechanism handle. Rotate & pull to slide door open past anti-breakout tube and maintain rotation to make swing possible.

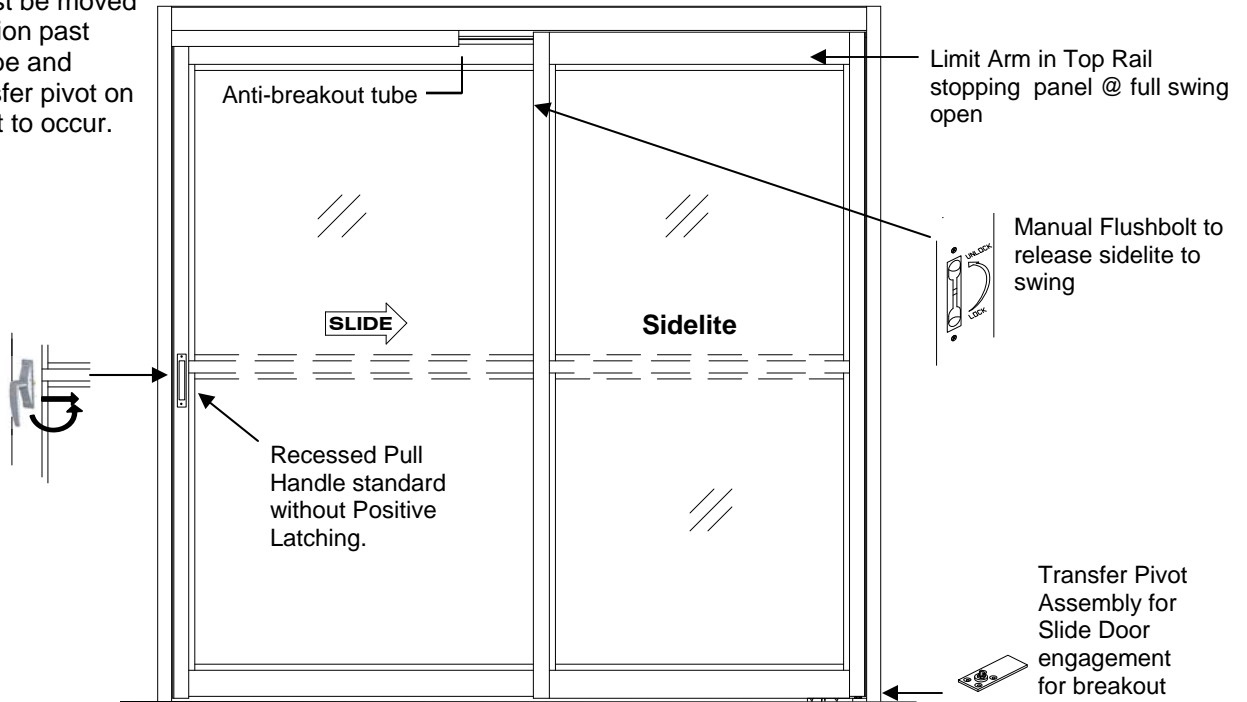

Track Unit > Operation

These units can swing out from any slide position, but for maximum opening and ease of operation, take slide panel to full slide open point.

If equipped > Positive Latch mechanism handle. Rotate & pull to slide door open and maintain rotation to make swing possible.

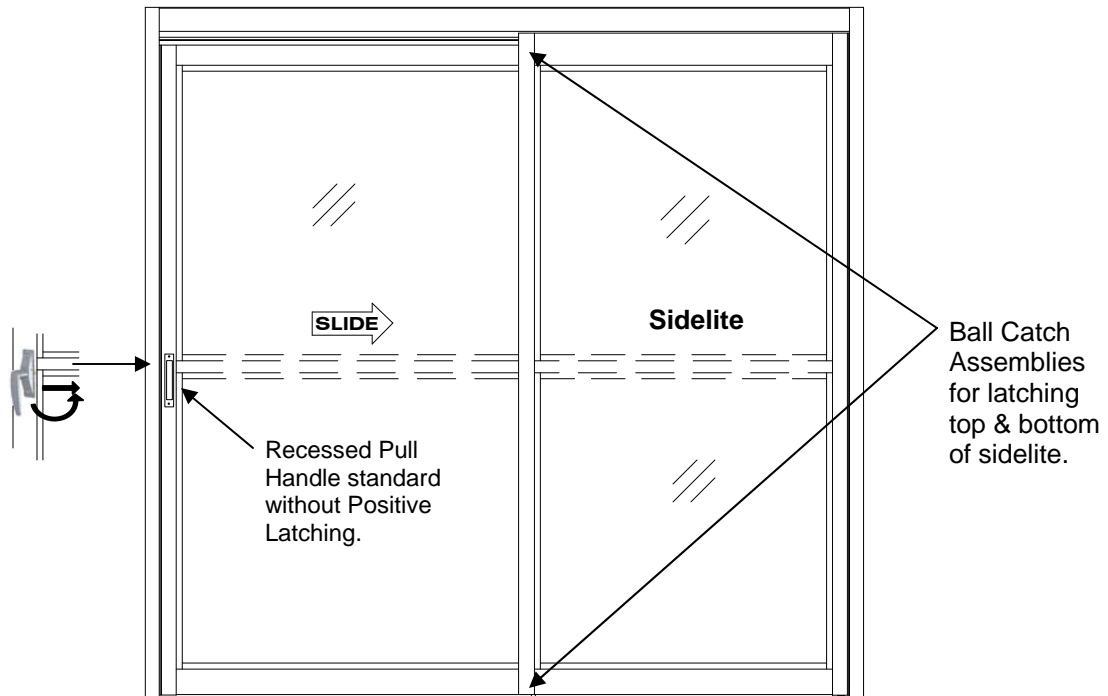


record-USA Manual ICU Sliding Doors Owner's Manual

8/09

Track / Fixed Panel Unit > Operation

Only the Slide Door will swing to the 90° open position. This is accomplished in the following manner.

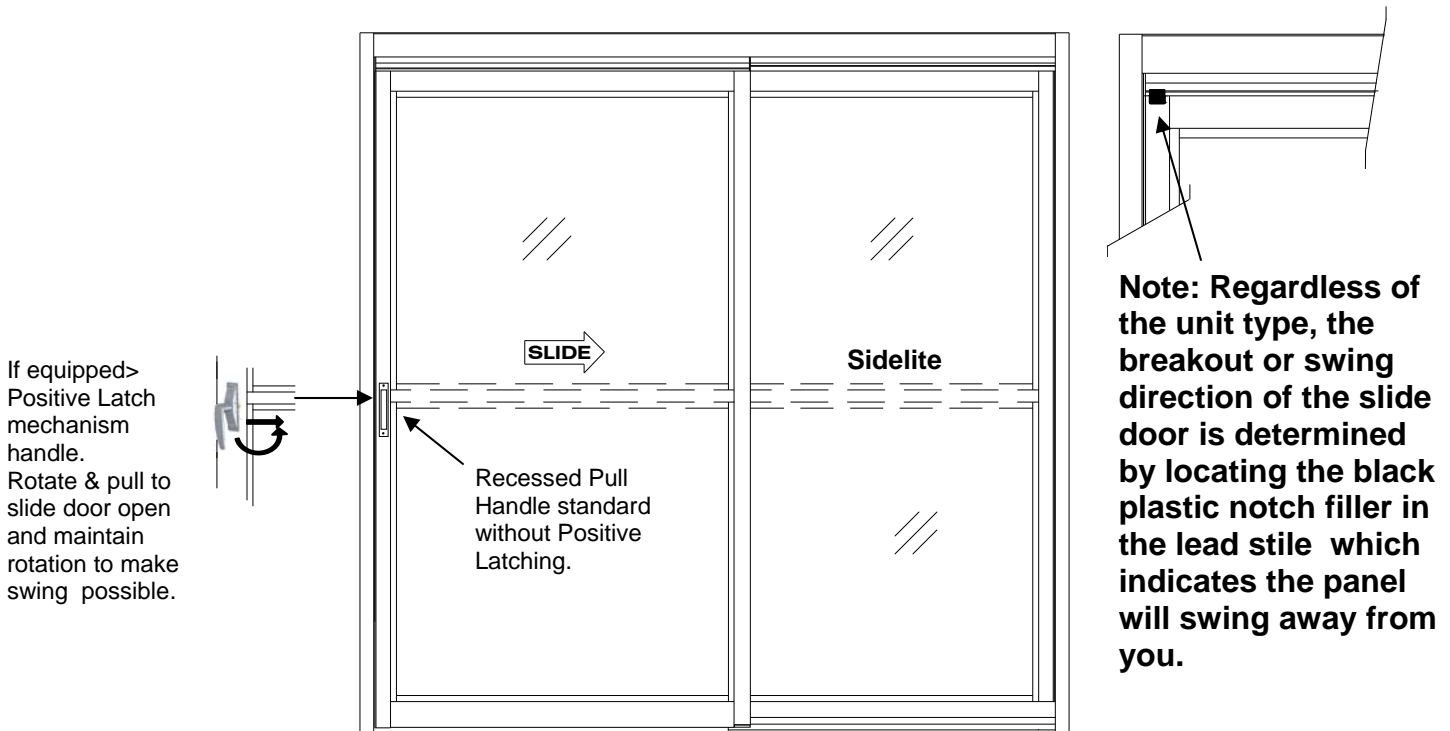

WARRANTY record CCU/ICU Units

STANDARD WARRANTY

We warrant that **record** CCU/ICU Units have been manufactured from high-grade materials with first class workmanship. Subject to the other conditions of this **Warranty**, if any parts of our own manufacture prove defective in material or workmanship within **1 year** after original installation, we shall repair or replace such parts free of cost. If any equipment or parts not of our own manufacture are utilized in connection with this door operator and equipment, we shall assume responsibility and liability for defects only to the extent of such adjustment as the manufacturer there of makes to us. The warranty shall not extend beyond **1 year** from the date of installation regardless of any replacements, which may be made.

Our obligations under this **Warranty** are conditional upon the owner's having (1) given us prompt written notice of alleged defects, and (2) upon our request, returning allegedly defective items to our facility in Monroe, North Carolina, freight prepaid, for our Inspection.

We shall have no obligation or liability, under this **Warranty** or otherwise, in the event of improper installation of this equipment unless and until the installation is correct. However, in no case shall we have any obligation or liability beyond eighteen months after original installation or any replacement or repairs that may be made. We reserve the right, without obligation, to inspect all installations of **record** door equipment for the protection of both the owner and ourselves.

In no event shall we have any obligations or liability, under this **Warranty** or otherwise, resulting in whole or in part for damage to defects in the equipment caused by abuse, misuse, malicious mischief, acts of God, casualty, improper handling or the negligence of the owners or others. Nor shall we have any obligations or liability for any loss, cost or expense incurred in the repair or replacement of the door equipment except on express written authority from our office in Monroe, North Carolina.

The owner's sole remedy against us for any alleged defects in the **record** door equipment shall be as provided in this **Warranty**. We hereby disclaim all other obligations and liability for damages, including any incidental consequential damages. **THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.**

This **Warranty** may not be changed, expanded or modified in any way except in writing, signed by our duly authorized representative. **record** factory-authorized distributors would provide any Warranty covering field labor.